
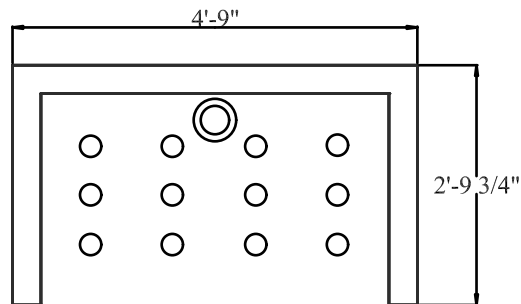


Plan View

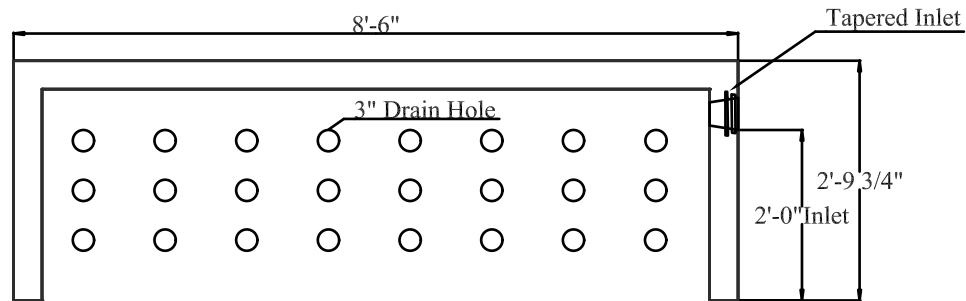

Elevation View

Typical Dry Well Installation

Prepare a level bed of 1 1/2" crushed stone as high above the water table as possible. Place Dry Well with opening down. Backfill with crushed stone to cover drain holes. Finish by covering with native material.

500 Gallon Dry Well		
Del R. Gilbert & Son		
Block Co., Inc.		
Laconia	Hooksett	Tamworth
524-1353	669-9258	323-3373